www.viera-co.com

LED DISPLAY | USB DISK | FM TUNER | REMOTE CONTROL | CARD | TOUCH

VI-8650R

2.1 Touch Speaker System

DEAR CUSTOMER

Congratulations on your purchase!
Please read this manual carefully and keep it for future reference

Specification:

*P.M.P.O: 4500W
*Channel: 2.1
*Output Power:30W+10Wx2
*Frequency Response:40Hz~20KHz
*S/N Ration:≥70dB
*Separation:≥45dB
*Speaker Unit: 6.5"+3"x2

Inside Package:

Subwoofer Speaker	1pc
Satellite Speaker	2pcs
Audio Cable	1pc
User Manual	1pc
Remote Control	1pc
FM ANT	1pc
Guarantee Card	1pc

Caution:

1.Do not splash or drip liquid on the surface
2.Do not place any objects filled with water over the apparatus.
3.Do not block the ventilation holes.
4.For indoor use only.
5.When using high output signal don't turn the volume to maxi
- mum to avoid distortion.

Front panel

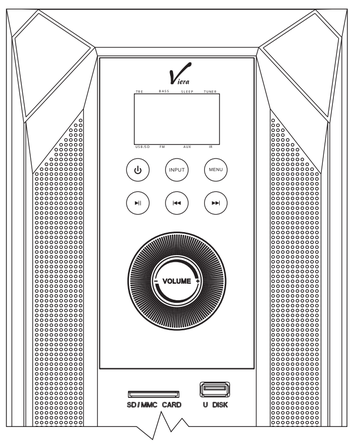

Front panel

TRE- ---------- Treble function key indicator lamp.
BASS---------- BASS function key indicator lamp.
SLEEP--------- Sleep function key indicator lamp.
TUNER--------- Tuner function key indicator lamp.
USB/SD-------- USB/SD function key indicator lamp.
FM- ---------- FM function key indicator lamp.
AUX- ---------- AUX function key indicator lamp.
IR- ---------- The remote sensor.
⏻ ---------- ST.BY function key.
INPUT- ---------- Input function key.
MENU- ---------- Menu function key.
VOLUME------- when rotating the button, the function is
Volume+/ Volume -
⏯ - ---------- Play/pause
⏮- ---------- Previous
⏭- ---------- Next
SD/MMC CARD- - - SD card socket
U DISK - ---------- USB socket

When using SD card function ,it is required to choose SD card whose memory is more than 512M and also is legal edition.

Touch Function

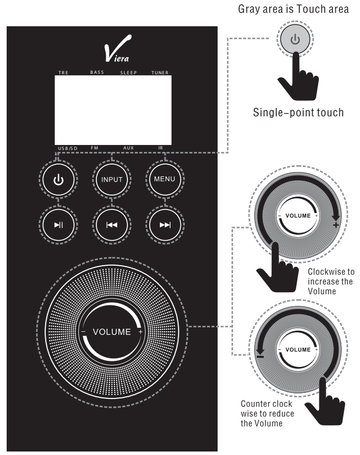

How to use the remote control



⏻ ---------- Power switch button(standby) switch On or off for waiting or On condition.
USB---------- USB Disk
SD---------- SD Input
FM---------- FM Input
AUX---------- AUX Input
AUTO-------- Keep pressing for FM channel
SAVE-------- Save FM Channel
TUNE- /+----- Previous /Next Channel Keep Pressing to search the channel
⏯ ---------- Play & pause
⏮ ---------- Previous s ong when USB/SD Input; CH- Previous channel when FM Input
⏭ ---------- Next song when USB/SD Input; CH+ Next channel when FM Input
SLEEP- /+---- to Time on/off the speaker
SW- /+------ SW volume to upgrade & attenuation of the key
TRE- /+------ TREBLE volume to up grade & attenuation of the key
VOL- /+------ Master Volume
---------- Press any key to choose the song
REPEAT----- Repeat
RESET------ When the volume is at the maximum, press "RESET" button.at the status while power on.

* If the Remote control can not function, it is because the battery of Remote Control has been used up. Thank you.

System connection diagram

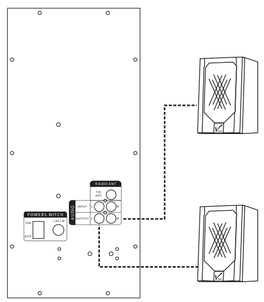

SPEAKER TERMINALS

Connect front speakers, a center speaker, surround speakers to 2.1 speaker output terminals.

NOTE:
* Do not leave magnetic objects near the speakers.

System connection diagram

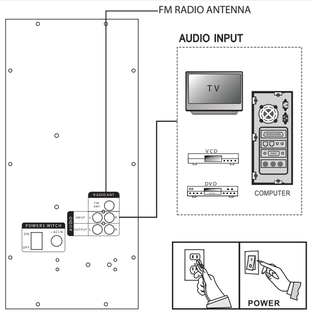

Connecting equipment

Jacks and plugs of the connection cord are colored as follows:Red jacks and plugs:For the left channel of audio si - gnals

NOTE:
Insert the plugs fully into the jacks.Loose connections may produce a humming sound or other noise interference.

Important:
Connect the speakers and all other external equipment and finally connect the AC power cord.

Positioning the speakers

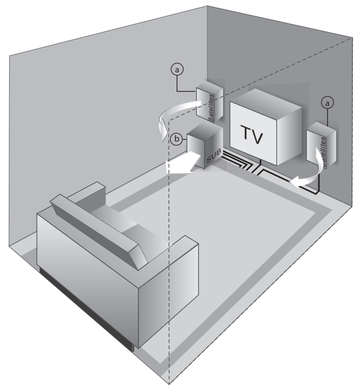

ⓐ Speakers

Positioning the speakers

ⓑ Sub-woofer
Place the sub- woofer any place on the floor.(There is no - directional requirement for the Bass effect.)

Important

WARNING!

Mobile phone, Mobile HardDisk Drive, MP4.
Electrons with USB Power are Not allowed!